

GLAMPALM Professional Hair Styling Iron

ABSOLUTE STYLING

| GP232AN



Convenient Fuction For Safe Use

ABSOLUTE STYLING

! Sleep Mode Function

When the iron is turned on and there is no temperature change for over 35 seconds, the iron is automatically set to sleep-mode. During sleep mode, the heat-plates will not heat up and power if turned OFF.

* To turn off the sleep-mode: Close the plates once to activate.

Warranty Card

ABSOLUTE STYLING

The Glampalm hair styling iron comes with 1 year warranty from the date of purchase, if the appliance is defective.

In no event shall Glampalm be liable for any special incidental or consequential damages for breach of this or any other warranty expressed or implied whatsoever.

Please fill out the following information, send the defective appliance to the address listed below.

• Full Name : _____

• Address : _____

• Telephone : _____

• Email : _____

• Serial Number : _____

• Model Number : _____

• Date of purchase : _____

Please complete this registration card and mail back to Glampalm dealer nearest you within 21 days of purchase. You may find the Glampalm dealer at www.glampalm.com.

glampalm®

www.glampalm.com
Manufactured in Korea

User's Manual

Professional Hair Styling Iron

GP232AN



Please read the instructions carefully before using the iron

Name and Functions

ABSOLUTE STYLING



- ① Heat plate: Special Ceramic coated
- ② Working & Reach For Set-Temp Indication
- ③ 360° Rotation Swivel Cord

Product Specification

ABSOLUTE STYLING

Model	GP232AN
Power	200-240 V~, 50-60 Hz
Power Consumption	40 W
Power Control	MICOM Method
Heater	Ceramic Heater
Temperature	195°C / 165°C
Cord Length	2.7 m
Heat Plate	24(W) X 90(L)
Dimension	31(W) X 266 (L) X 38.8 (H)
Weight	224 g (without cord)

※The design and product specification changes to improve quality may occur without prior notice.

Features

ABSOLUTE STYLING

Glampalm is a **new premium hair iron** with cutting-edge technology with ergonomic and user-centric design.



- 1. Ceramic Coating**
Special Ceramic coated heat plates prevents damage to the hair and scalp.



- 2. Cushion and Tilting**
Cushion and tilting function added to the heat plate, minimizing the pressure on the hair and transmit heat equally on the hair, allowing to give smoother hair style.



- 3. Quick Heat Up and Fast Temperature Recovery**
Ceramic heater and MICOM heating control system raise temperature quickly and keeps the heat consistent to deliver the best performance.



- 4. 360° Swivel Cord**
Swivel cord Rotates 360° maximizes durability and convenience.



- 5. Sleep Mode for Safety**
When the iron is turned on and there is no temperature change for over 35 sec, the iron stops heating for safety precaution.

Instructions

ABSOLUTE STYLING



Plug the iron onto an outlet. Close/open the body and a buzzer will go off. The LED will light and ready to use.



The LED will flicker when the temperature rises to the set temperature. And will remain lit once the temperature is reached.



Comb the hair evenly and setting the hair on the middle of the heat plate. Softly glid the hair downwards. (About 15 cm. width would be most appropriate)



Do not slide too fast or stop in the middle. If you stop at the middle. It would leave a mark and desire hairstyle won't come out when sliding too fast.



If the iron is turned on but not been used for over 35 seconds, it will automatically go into sleep mode. To re-use the iron, just close/open the plates.



Unplug the iron after finishing use.

Important Safety Instructions

ABSOLUTE STYLING

Read all instructions before using.

DANGER: When using any electrical appliance, basic safety precautions should always be followed. Be especially cautious if children are present. As with most electrical appliances, electrical parts are electrically live even when switched off.

- HOT! Do not touch heating plates. Keep eyes and skin away from heated surfaces.
- Always unplug the appliance immediately after use.
- The iron is designed to operate ONLY in standard electrical outlets: 220 V~ 50/60 Hz.
- Do not use this appliance with a voltage converter and extension cord with this appliance.
- Do not clean this appliance with thinner, gasoline, or alcohol.
- Never operate this appliance if it has damaged cord or plug. If it is not working properly. If it has been dropped or damaged, or if it has come in contact with water.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance.
- Do not insert anything onto the plates or into any openings.
- Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.
- Do not place this appliance directly on any unsafe surface while it is hot or plugged in. Storing on heatproof surfaces such as the heat proof appliance storage pouch is suggested.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.



WARNING: DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER.



THIS MARKING INDICATES THAT THIS PRODUCT IS NOT TO BE DISPOSED OF WITH OTHER HOUSEHOLD WASTES. TO PREVENT POSSIBLE HARM TO THE ENVIRONMENT OR HUMAN HEALTH FROM UNCONTROLLED WASTE DISPOSAL, RECYCLE IT RESPONSIBLY TO PROMOTE THE SUSTAINABLE REUSE OF MATERIAL RESOURCES TO RETURN YOUR USED DEVICE, PLEASE USE THE RETURN AND TRANSACTION SYSTEMS OR CONTACT THE RETAILER WHERE THE PRODUCT WAS PURCHASED. THEY CAN TAKE THIS PRODUCT FOR ENVIRONMENTAL SAFE RECYCLING.

**** If the cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified person in order to avoid a hazard ****

PLEASE SAVE THIS INSTRUCTIONS.