


## SPECIFICATION

ABSOLUTE STYLING

GP709AS

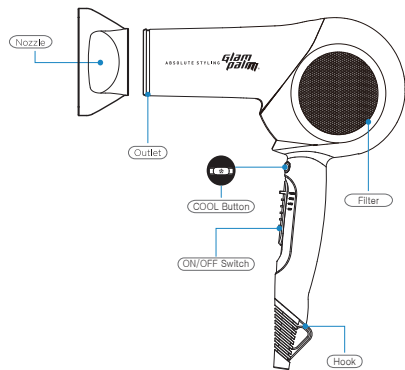

ITEM	HAIR DRYER
MODEL NO.	GP709AS
POWER	220-240 V, 50/60 Hz
POWER CONSUMPTION	1300 watts
MOTOR TYPE	DC MOTOR
WEIGHT	408g (W/O CORD)
CORD LENGTH	3.2 metres
MANUFACTURE DATE	INDICATED ON THE PRODUCT
MANUFACTURER	UNIL Electronics Corp.

### WARRANTY:

This appliance comes with a one-year limited warranty against defects caused by faulty material or workmanship including the power cord. Damages from improper handling or abuse are not covered under warranty.

For further warranty information and terms & conditions, contact the authorised distributor in your country.

## WARRANTY

ABSOLUTE STYLING

GLAMPALM Hair Dryers come with a 12 month limited warranty from the date of purchase. Upon receipt of a valid claim, GLAMPALM will repair or replace the defective product with another product of equal or greater value. GLAMPALM cannot honor warranty for any products purchased from an unauthorised seller. GLAMPALM does not replace the product outside of the warranty period.

To contact UNIL ELECTRONICS CORP., please complete this card and mail to the nearest GLAMPALM distributor.

• Full Name

• Address

• Telephone

• E-mail

• Serial Number

• Model Number

• Date of Purchase

UNIL Electronics Corp.

**glam palm**



## USER'S MANUAL

PROFESSIONAL

**HAIR DRYER**

GP709AS 1300W

ABSOLUTE STYLING

**glam palm**

UNIL Electronics Corp.  
www.glampalm.com

Made in Korea

## IMPORTANT SAFETY INSTRUCTIONS

ABSOLUTE STYLING

- Do not place the product close to heat of fire or use it near inflammable material.
- To clean the handle, use a dry cotton cloth or a neutral detergent and make sure water does not get inside.
- Do not pull, bend or twist the power cord with excessive force, as doing so may snap the cord, which can cause failure.
- Do not drop or exert strong shock onto the product. Doing so may cause failure or give you an electric shock.
- Do not use the product near chemicals or flammable material, as doing so may cause a serious accident.
- Avoid using this product in a wet place such as a bath tub or sink and do not use with wet hands.
- To discard the product, always discard at a designated place. When the product does not work, do not disassemble at your discretion but contact the customer service center.
- Do not block the inlet while the product is in operation.
- Turn off power to install or eliminate the nozzle.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off;
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

## FEATURES

ABSOLUTE STYLING

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.



**WARNING :** Do not use this appliance near bathtubs, showers, basins or other vessels containing water

**\*\* If the cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified person in order to avoid a hazard \*\***

### SAVE THESE INSTRUCTIONS



#### 1. COOL Button

The product is designed with separate COOL button for better convenience.



#### 2. Various Control

The product has 3 levels of control for each HEAT and COOL mode, designed to satisfy the needs of the styler, whether to dry or style one's hair.



#### 3. Ergonomic Design

The product's grip is ergonomically designed for user convenience.



#### 4. Light Weight

The product's weight is 408g, thus even with long-time usage, it is designed to minimize wrist fatigue.



#### 5. Quick Dry

The product uses lower power consumption compared to other products but at TURBO, hair dries quicker.



#### 6. Hair Protection

With special ceramic coated heater, far infrared rays and anions are emitted, protecting damaged hair.

## OPERATION INSTRUCTIONS

ABSOLUTE STYLING



#### 1. Plug the cord into the outlet.

Check whether the switch is turned off, and plug the cord into the power outlet.



#### 2. To Dry Hair (Rapid Dry)

Dry hair initially with a towel. Remove the nozzle. Turn the dryer to Turbo and dry hair.



#### 3. To Style Hair

Attach the nozzle to the dryer. Hair must be appropriately wet. Use a brush or comb to style the hair in LOW or HIGH according to the stylist's desire.

★ Heat can damage hair when used for a prolonged period of time. Do not direct heat to any part of your hair or body for a prolonged period of time.



#### 4. Using COOL Button

The COOL function is activated when the blue LED is illuminated. Use this mode for damaged or static hair.



#### 5. After Using

After using, turn the switch OFF and unplug the cord. Store in a place where children cannot reach.

## SAFETY INSTRUCTIONS

ABSOLUTE STYLING



1. Do not store the product near fire or in areas with high temperature and humidity.



2. Keep away from children's reach.



3. Clean the grip with dry cloth or with a neutral detergent, never let water enter.



4. Do not pull the plug cable with much pressure or bend or twist the cord. It could disconnect the wiring and cause defect.



5. Do not drop the product or give too much force on the product. It could cause defect or electrical shock.



6. Do not use near any chemicals or flammable materials. It may cause serious injuries or even death.



7. Do not use while bathing, or place this appliance where it can fall or be pulled into a tub or sink. Never use with wet hands.



8. Dispose the product in designated center, and when the product is not working do not disassemble and contact your nearest distributor.