


SPECIFICATION

ABSOLUTE STYLING

GP711CS

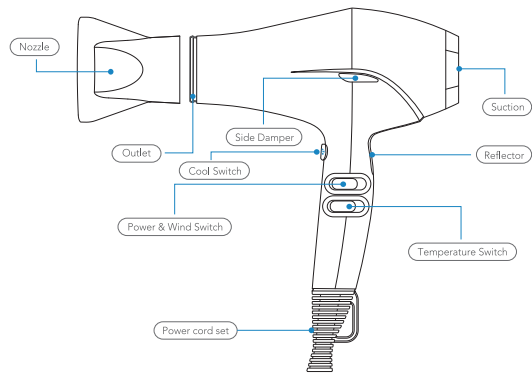

ITEM	HAIR DRYER
MODEL NO.	GP711CS
POWER	220 ~ 240V
POWER CONSUMPTION	2,000W
MOTOR TYPE	AC MOTOR
WEIGHT	570g (W/O CORD)
CORD LENGTH	2.7m
MANUFACTURE DATE	INDICATED ON THE PRODUCT
MANUFACTURER	Unil Electronics Corp.

WARRANTY

ABSOLUTE STYLING

GLAMPALM Hair Dryer comes with 12 month limited warranty from the date of purchase, if the appliance is defective. Upon receipt of a valid claim, GLAMPALM Hair Dryer will repair or replace with product of equal or greater value. We cannot honor warranty for any product purchased from an unauthorized seller, including eBay. We do not replace the product outside of the warranty period.

You may contact UNIL ELECTRONICS CORP. Please complete this card and mail back to GLAMPALM dealer nearest you.

• Full Name

• Address

• Telephone

• E-mail

• Serial Number

• Model Number

• Date of Purchase

UNIL Electronics Corp.

ABSOLUTE STYLING

glampalm®

UNIL Electronics Corp.
www.glampalm.com

Made in Korea

glampalm®



USER'S MANUAL

PROFESSIONAL
HAIR DRYER

GP711CS [2000W]

IMPORTANT
SAFETY INSTRUCTIONS

ABSOLUTE STYLING

Read all instructions before using.

DANGER :

When using any electrical appliance, basic safety precautions should always be followed. Be especially cautious if children are present. As with most electrical appliances, electrical parts are electrically live even when switched off.

- **HOT!** Do not touch the nozzle. Keep eyes and skin away from the heated surfaces.
- Always unplug the appliance immediately after use.
- The dryer is designed to operate **ONLY** in standard electrical outlets: 220~240 V
- Do not use this appliance with a voltage converter.
- Do not clean this appliance with thinner, gasoline, or alcohol.
- Never operate this appliance if it has damaged cord or plug. If it is not working properly. If it has been dropped or damaged, or if it has come in contact with water.
- Do not reach for this appliance if it has fallen into water, unplug it immediately.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance.
- Do not insert anything onto the openings or into the nozzle.
- Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.

IMPORTANT
SAFETY INSTRUCTIONS

ABSOLUTE STYLING

- Do not place this appliance directly on any unsafe surface while it is hot or plugged in. It is recommended to use a stand or heat proof mat to avoid burning any surfaces.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

**WARNING :** DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER

THIS MARKING INDICATES THAT THIS PRODUCT IS NOT TO BE DISPOSED OF WITH OTHER HOUSEHOLD WASTES. TO PREVENT POSSIBLE HARM TO THE ENVIRONMENT OR HUMAN HEALTH FROM WASTE DISPOSAL, RECYCLE IT RESPONSIBLY TO PROMOTE THE SUSTAINABLE REUSE OF MATERIALS SOURCES.

TO RETURN YOUR USED DEVICE, PLEASE USE THE RETURN AND TRANSACTION SYSTEMS OR CONTACT THE RETAILER WHERE THE PRODUCT WAS PURCHASED. THEY CAN TAKE THIS PRODUCT FOR ENVIRONMENTAL SAFE RECYCLING.

****If the cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified person in order to avoid a hazard ****

PLEASE SAVE THIS INSTRUCTIONS.

OPERATION INSTRUCTIONS

ABSOLUTE STYLING

**1. Plug the cord into the outlet.**

Check whether the switch is turned off, and plug the cord into the power outlet.

**2. To Dry Hair (Rapid Dry) Dry hair initially with a towel.**

Dry hair initially with a towel. Remove the nozzle. Turn the dryer to Turbo and dry hair.

**3. To Style Hair**

To Style Hair. Put the nozzle into the outlet. Hair must be appropriately wet. Use a brush or comb to style hair, and put the dryer in low setting.

*The heat could damage hair when used for long time. Do not use too long.

**4. Using COOL Switch**

If you push the COOL switch, blue LED will light on and cool function is turned on. This is used for damaged or much static hair.

**5. After Using**

After using, turn the switch OFF and unplug the cord. Store in a place where children cannot reach.

SAFETY INSTRUCTIONS

ABSOLUTE STYLING



1. Do not store the product near fire or in areas with high temperature and humidity.



2. Keep away from children's reach.



3. Clean the grip with dry cloth or with a neutral detergent, never let water enter.



4. Do not pull the plug cable with much pressure or bend or twist the cord. It could disconnect the wiring and cause defect.



5. Do not drop the product or give too much force on the product. It could cause defect or electrical shock.



6. Do not use near any chemical or flammable materials. It could cause serious accident.



7. Do not use while bathing, or place this appliance where it can fall or be pulled into a tub or sink. Never use with wet hands.



8. Dispose the product in designated center, and when the product is not working do not disassemble and contact your nearest distributor.