

**OPERATING INSTRUCTION**

1. Plug the appliance into a wall outlet (220 ~ 240 V, 50/60 Hz)
2. Select temperature setting High-Medium or Low depending on hair texture.
  - a. For bleached, fragile, damaged and/or fine hair, set temperature to Low. If you find that you have to wrap hair several times in order to get the desired result, you can hold wrapped hair in curl formation longer or increase the temperature.
  - b. For normal hair, set temperature to Medium. If curl formation doesn't form after several passes, increase the temperature to High.
  - c. For coarse, thick, ethnic and/or resistant hair, set temperature to High.
3. Push power switch "ON". The iron will be ready to use in 30 seconds. Initial temperature of iron corresponds to duration of time power button is pressed. Before use, it is recommended that you put on the heat proof glove.
  - a. Easy To Read Light: Blinking Red when heating up, Solid Green when adjusted to desired temperature and ready to use.
  - b. Adjustable Temperature Control: Adjust temperature by pressing power button 1x to change temperature up or down. When temperature reaches desired state and solid green light appears, iron is ready for use.
  - c. Auto Shut Off: When the iron is turned on for use, the default setting for the auto shut off is automatically activated and a solid blue light will appear. This safety feature will automatically shut the iron off after 30 minutes. To dis-engage this feature, press the AUTO button down until the blue light does not appear. This will remain off until the irons next use.
  - d. Safety Kickstand Feature: Allows you to rest your iron safely on any surface while in use or while cooling down.
  - e. Heat Proof Glove: It is recommended to use the supplied heat proof glove to avoid any risk of burn injuries, as the iron gets very hot when in use.
4. Hold the power button down to turn the iron off after usage.
5. Curling Iron Instructions:
  - Step 1:** Select a 2-3" section of hair. Comb to smooth and place the section of hair near the base of the curling iron, holding the curling iron handle close to the root of your hair with the tip facing down.
  - Step 2:** Wrap the hair from the base of the curling iron from end to tip in a downward direction.
  - Step 3:** Hold curl formation for 2 to 5 seconds.
  - Step 4:** Slide the curling iron out of the hair and pull the curl taut from the tip to loosen.
  - Step 5:** Repeat this through the remaining sections of hair.
6. Storage:
  - a. Allow appliance to cool and keep out of reach of children.
  - b. NEVER wrap cord around the iron since this will cause cord to break prematurely.
  - c. Handle cord carefully for longer life and avoid jerking, bending or twisting, especially at plug and iron connection points.
  - d. A heatproof pouch is suggested for storing purposes.

**USER MAINTENANCE**

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If your Sedu iron malfunctions, unplug it immediately, allow it to cool, and contact your local retail representative. Do not attempt to repair it yourself.



www.glampalm.com.au


**USER'S MANUAL**

PROFESSIONAL CLIPLESS CURLING IRON

**PRODUCT INFORMATION**
**GP606AM**  
**Professional Clipless Curling Iron**
**PACKAGE INCLUDES**

GP 606 Clipless Curling Iron  
Heat proof glove  
User's manual

**WARRANTY**

All Glampalm styling tools carry one (1) year limited warranty against damage caused by faulty material and/or workmanship from date of purchase, in which your item will be repaired or replaced with a like refurbished product. This warranty does not cover damages resulting from accident, misuse, abuse, attempts at repair or the use of unauthorized attachments.

Manufactured in Korea

**IMPORTANT SAFETY INSTRUCTIONS**

Read all instructions before using.

**DANGER:** When using any electrical appliance, basic safety precautions should always be followed. Be especially cautious if children are present. As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- **HOT!** Do not touch barrel. Keep eyes and skin away from heated surfaces.
- Always wear the supplied heat proof glove when using the iron.
- Keep away from water.
- Always unplug the appliance immediately after use.
- Do not use while bathing, or place this appliance where it can fall or be pulled into a tub or sink.
- The iron is designed to operate ONLY in standard electrical outlets – 220 ~ 240 V, 50/60 Hz.
- Do not use this appliance with a voltage converter.
- Do not reach for this appliance if it has fallen into water, unplug it immediately.
- Do not clean this appliance with thinner, gasoline, or alcohol.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has come in contact with water.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance.
- Never use while sleeping.
- Do not place anything onto the barrel.
- Do not use outdoors or operate where aerosol products are being used, or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not place this appliance directly on any unsafe surface while it is hot or plugged in. It is recommended to use the built in heat stand to avoid burning any surfaces.
- Storing on heatproof surfaces, such as a Heat Proof Appliance Storage Pouch, are suggested.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.



**WARNING:** DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER.



THIS MARKING INDICATES THAT THIS PRODUCT IS NOT TO BE DISPOSED OF WITH OTHER HOUSEHOLD WASTES. TO PREVENT POSSIBLE HARM TO THE ENVIRONMENT OR HUMAN HEALTH FROM UNCONTROLLED WASTE DISPOSAL, RECYCLE IT RESPONSIBLY TO PROMOTE THE SUSTAINABLE REUSE OF MATERIAL RESOURCES.

**\*\* Check -www.glampalm.com.au- for more detailed information about the product \*\***

**\*\* If the cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified person in order to avoid a hazard \*\***

**SAVE THESE INSTRUCTIONS**