

WARRANTY CARD

The Glampalm hair styling iron comes with 1 year warranty from the date of purchase, if the appliance is defective.

In no event shall Glampalm be liable for any special incidental or consequential damages for breach of this or any other warranty expressed or implied whatsoever.

Please fill out the following information, send the defective appliance to the address listed below.

• Full Name :

• Address :

• Telephone :

• Email :

• Serial Number :

• Model Number :

• Date of purchase :

Please complete this registration card and mail back to Glampalm dealer nearest you within 21 days of purchase. You may find the Glampalm dealer at www.glampalm.com.

PRODUCT SPECIFICATIONS



- 1 Glampalm GP101
- 2 Glampalm GP201
- 3 Glampalm GP313
- 4 Glampalm GP501

Model Name	GP101	GP201	GP313	GP501
Power	100-240 V~, 50-60 Hz			
Rated Input Power	30 W	35 W	40 W	50 W
Control Method	Micom			
Heater	Ceramic Heater			
Length of Cord	3m			
Size (W) x (L) x (H)	30 x 250 x 38	30 x 250 x 38	32 x 90 x 7.8	45 x 257 x 38
Weight (Without Power Cord)	190g	232g	248g	300g

* Design and product specifications are subject to change without prior notice for quality improvement.

glampalm®

glampalm®

User's Manual

HAIR IRON

Glampalm Hair Iron

GP101
GP201
GP313
GP501

www.glampalm.com

MANUFACTURED in Korea by UNIL Electronics Corp.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using.

DANGER: When using any electrical appliance, basic safety precautions should always be followed. Be especially cautious if children are present. As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- HOT! Do not touch the heating plates. Keep eyes and skin away from heated surfaces.
- Always unplug the appliance immediately after use.
- The iron is designed to operate ONLY in standard electrical outlets: 100-240 V~, 50/60 Hz.
- Do not use this appliance with a voltage converter.
- Do not clean this appliance with thinner, gasoline, or alcohol.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has come in contact with water.
- Do not reach for this appliance if it has fallen into water, unplug it immediately.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance.
- Do not use outdoors or operate where aerosol products are being used, or where oxygen is being administered.
- Do not insert anything onto the plates or into any opening.
- Do not place this appliance directly on any unsafe surface while it is hot or plugged in. It is recommended to use the built in heat stand to avoid burning any surfaces.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been

given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance



WARNING: DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER



THIS MARKING INDICATES THAT THIS PRODUCT IS NOT TO BE DISPOSED OF WITH OTHER HOUSEHOLD WASTES. TO PREVENT POSSIBLE HARM TO THE ENVIRONMENT OR HUMAN HEALTH FROM UNCONTROLLED WASTE DISPOSAL, RECYCLE IT RESPONSIBLY TO PROMOTE THE SUSTAINABLE REUSE OF MATERIAL RESOURCES.

TO RETURN YOUR USED DEVICE, PLEASE USE THE RETURN AND TRANSACTION SYSTEMS OR CONTACT THE RETAILER WHERE THE PRODUCT WAS PURCHASED. THEY CAN TAKE THIS PRODUCT FOR ENVIRONMENTAL SAFE RECYCLING.

**** If the cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified person in order to avoid a hazard ****

SAVE THESE INSTRUCTIONS

FEATURES

Congratulations on your purchase of the most advanced professional hair styler in the world.
The Glampalm embody beauty and technology to deliver an unparalleled styling experience for all types of hair.

1. Quick heating and restoration

Ceramic heater and MICOM heating control system raise temperature quickly and keep the heat consistent to deliver the best performance.

2. 3D Swivel cord that moves in any direction

Ball type swivel cord that moves in any direction and rotates 360 degrees maximizes durability and convenience.

3. Cushion and tilting

Heat plate, cushion and tilting are available, minimizing pressure on hair and giving equal distribution of heat.

4. Dual safety device

"Bimetal" - Prevents overheating.
"Sleep mode" - Power gets automatically turned off when not in use for 90 min.

5. Universal voltage

Can be used anywhere in the world.

6. Ceramic coating

Heat plates are coated with special ceramic, preventing damage to hair and scalp.

INSTRUCTIONS

1. Let cord out and plug in.
2. Turn the power switch to "on." You will hear a "beep" and the blue LED light display will illuminate.
3. The Glampalm Styler has multiple settings ranging from 100°C to 200°C. To adjust the heat setting simply click the inside temp button up or down until the blue LED light is positioned on your desired temperature. The blue LED light will flash while the plates heat up and will then become a solid blue light once the plates are fully heated.
4. The Glampalm Styler has a very special plate coating. This coating will enable you to use the Glampalm Styler at much lower temperatures compared to other stylers and still receive superior results without damaging your hair. We suggest you start at lower temperatures and increase the heat until you reach the temperature that works best for your hair type.
5. Before using the styler ensure your hair is dry. Using a heated styler on wet hair can damage the hair cuticle.
6. The styler will be easier to use if you separate the hair into sections. Pass the styler through the hair at a steady, controlled pace. Glampalm's advanced technology will generally require only one pass through the hair to achieve your desired results.
7. The styler will automatically shut-off when not in use for 90 minutes. Turn the switch back on to reheat.
8. When not in use for any extended period of time it is highly recommended you place the styler in the provided heat resistant cap for safety and to prolong the life of your styler.
9. After use, turn the power off, unplug the cord and keep it in a safe place. (Do not wind the cord around the styler.) Allow the plates to cool before storing. When the styler has cooled fold the cord in the same way as it was first delivered in its packaging. We recommend using the provided heat resistant cap and heat resistant pouch when storing your Glampalm styler.